

WK 30E UK

220-240V
3000W

PARTS AND FEATURES

1. Water gauge
2. Kettle
3. Spout
4. Limescale filter (removable)
5. Lid
6. Lid opening button
7. Handle
8. Pre-Boil button
9. Keep-warm button
10. Display
11. Temperature setting button
12. Cancel button
13. Cable
14. Base

INTRODUCTION

Thank you for purchasing our product.
In doing so, you have opted for an effective high-performance appliance.

If the instructions on the correct use of this appliance are not observed, the manufacturer shall assume no responsibility for any resulting damage.

The operating instructions may refer to different models: any difference is clearly identified.

IMPORTANT INFORMATION ON SAFETY

When using any electrical appliance, always follow basic safety precautions, including the following:

1. Connect and operate the appliance only in accordance with the specifications on the rating plate.
2. Read all the instructions before using the appliance.
3. Do not let the cord hang over the edge of a table / counter or touch any hot surfaces.
4. Do not place the appliance on or near a hot gas / electric burner or in a heated oven.
5. Do not operate the appliance without anything in it to avoid damaging the heating elements.
6. Ensure that the kettle is used on a firm flat surface out of the reach of children. This will prevent the kettle from overturning and causing damage or injury.
7. As a protection against fire, electric shocks or personal injury, do not immerse the cord, electric plugs or kettle in water or other liquids.
8. While the water is boiling or just after the water has boiled, avoid any contact with the steam.
9. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
10. Be careful when refilling a hot kettle.
11. The attached base cannot be used for any other purpose than its intended use.
12. Extreme caution must be used when moving an appliance containing hot water.
13. The use of accessory attachments that are not recommended by the appliance manufacturer, may result in fire, electric shocks or personal injury.
14. Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool down before installing / removing any parts and before cleaning it.
15. If the supply cord is damaged, have it replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazards.
16. This appliance has a built-in grounded plug. Make sure the wall outlet in your house is properly earthed.
17. Do not use the appliance for any other purpose than its intended use.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been provided supervision or instructions on the use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. This appliance is intended to be used for household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential-type environments;
 - bed&breakfast-type environments.
21. Always make sure that the appliance is in good working order and that all its removable parts are secure. Regularly check the power supply cord and plug for cuts or damage.
22. Be sure your hands are completely dry before touching the switch.
23. Risk of scalding: the kettle gets hot during use. Therefore use only the handle to pick it up and open the lid only after the kettle has cooled down.
24. Do not use it near the water in bathtubs, sinks or other containers.
25. Only fill the kettle with water. Milk and instant beverages will burn and damage the appliance.
26. The kettle can only be used with the stand provided.


BEFORE FIRST USE

Carefully wipe the outside of the appliance to remove any dust that may have accumulated. Dry with a dry cloth. Remove any labels or stickers. Do not immerse the supply cord in water or other liquids. If you are using the kettle for the first time, it is recommended that you clean it before use by boiling a full kettle of water twice and discarding the water.


OPERATION OF YOUR KETTLE


Use the kettle only with its included base.


1. To fill the kettle, remove it from the power base and open the lid by pressing the lid opening button, fill with the desired amount of water, and then close the lid. Alternatively, the kettle may be filled through the spout. The water level should not exceed the max marks or sit below the min level. Too little water will cause the kettle to switch off before the water has boiled.

 **The max capacity of the kettle is 1.7L. Do not add water over the maximum level, as it may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the plug into a power outlet.**

2. Position the kettle on the power base.
3. Connect the plug into a power outlet.
4. Press the temperature setting button to set the temperature to 50, 60, 70, 80, 90 or 100 °C.
5. When the water has reached the selected temperature, the kettle will switch off automatically, the display will show the temperature and a buzzer will sound.
6. If the temperature cannot be set, this means that the water in the kettle is hotter than the desired temperature. The current temperature will light up. You can turn off the kettle at any time by pressing the cancel button.

 **The selected temperature can be changed at any time while the kettle is heating up. While the kettle is heating up, the current temperature lights up.**

 **Be careful when pouring the water from your kettle as boiling water may cause scalds. Open the lid carefully while the water in the kettle is hot.**

 **Below 45° C, the kettle automatically shuts down and goes into “standby” mode.**

If the container is removed and re-introduced before the heating process is over, the settings stay active for a few minutes. Then

the appliance enters into stand-by mode. Press any button to start it again.

KEEP-WARM FUNCTION

This function makes it possible to keep the water at the set temperature.

You can turn it on with any temperature setting. Press the keep-warm button and a light will show that the function is active. To turn it off, press the button again. The keep-warm indicator goes off.

 **The keep-warm feature switches off automatically after 1 hour.**

PRE-BOIL FUNCTION

This function makes it possible to bring the water to the boil regardless of the set temperature. Press the Pre-Boil button to start it. The appliance heats the water up to the boiling point and stays active for 2 minutes. Then the temperature decreases to the set value and a buzzer sounds.


BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool down before filling with cold water.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet before cleaning.

1. Never immerse the kettle, power cord or power base in water and never allow moisture to get in contact with these parts.
2. Wipe the outside of the body with a damp cloth or cleaner. Never use a toxic cleaner.
3. Remember to clean the filter on a regular basis. For easier cleaning, detach the filter by pressing it down directly. Then replace it after cleaning.

 **Do not use chemical, steel, wooden or abrasive cleaners or brushes to clean the outside of the kettle to prevent any gloss loss.**

REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled, as the mineral deposits in tap water may form scale on the bottom of the kettle and cause a less efficient operation. You can use any commercially available descaler. Follow the instructions on the package of the descaler. Alternatively, you may follow the instructions below and use white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then add water to the amount so as to cover the bottom of the kettle completely. Leave the solution in the kettle overnight.
2. Discard the mixture in the kettle, fill the kettle with clean water, boil and then discard the water. Repeat several times until the smell of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing it with a damp cloth.

GUARANTEE

12 months Parts and Labour Guarantee

This certificate of guarantee represents the guarantee ("Guarantee" hereinafter) offered by Indesit Company UK Limited with registered office at Peterborough PE2 9JB in relation to products purchased in the United Kingdom and Indesit Ireland Limited with registered office in Dublin 9, Ireland for products purchased in the Republic of Ireland. This Guarantee does not affect your statutory rights.

Your product has the benefit of our manufacturer's Guarantee, which covers the product for twelve months from the date of purchase.

This gives you the reassurance that if, within that time, your product is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the product at no cost to you.

This Guarantee is subject to the following conditions:

- Documentary proof of original purchase date

is provided.

- Cosmetic damage must be reported within 14 days from the date of purchase.
- The product has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The product is used only on the electricity supply printed on the rating plate.
- The product has been used for normal domestic purposes only.
- The product has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us.
- Any repair work must be undertaken by us or our appointed agent.
- Any parts removed during repair work or any product that is replaced become our property.
- The product is used in the United Kingdom or Republic of Ireland.

The Guarantee does not cover:

- Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation.
- Accidental damage, this includes but is not limited to, damage which occurs as a result of an external action.
- Replacement of any consumable item or accessory. These include but are not limited to: plugs, cables, light bulbs, hoses, brushes, covers and filters.
- Replacement of any removable parts made of glass or plastic.

After Sales Service

No one is better placed to care for your Hotpoint product during the course of its working life than us – the manufacturer.

Essential Contact Information Advice Line

We have a dedicated team who can provide free advice and assistance with your product if you experience any technical difficulties. Simply call our Hotpoint Service Hotline on 08448 240 055 (**Republic of Ireland 0818 904 041**) for telephone assistance.

Please note:**Our advisors will require the following information:**Model number: Serial number: **Consumables and Accessories**

We supply a full range of consumables and accessories to keep your product functioning efficiently throughout its life.

UK: 08448 225 225**Republic of Ireland: 0818 313 413****www.hotpoint.co.uk****Recycling and Disposal Information**

As part of Hotpoint's continued commitment to helping the environment, Hotpoint reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage.

Please dispose of packaging and old products carefully.

Register your new product and get a second year FREE!

We want to give you additional benefits of ownership of your product and offer you an additional

free 1 year guarantee when you register your product with Hotpoint within 28 days of purchase. If you do not register your product with Hotpoint within 28 days, your product is guaranteed for 1 year only.

To activate your 2 year guarantee register with us online at www.hotpoint.co.uk. Please note that the 2 year guarantee is only available in UK and Ireland and is subject to the same conditions as the 1 year Guarantee. Please refer to the certificate of guarantee for more information.

DISPOSAL OF OLD ELECTRICAL APPLIANCES

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.



Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



Indesit Company UK Ltd
Morley Way,
Peterborough PE2 9JB

www.indesitcompany.com

WK 30E UK
02/2013 - ver.1.1