

Hot Air Curling Iron

User's manual

EN



SENCOR®

SHS 7401WH

Prior to using this product, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of products. Only use the product in the manner described in this user's manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original shipping cardboard box, packaging material, receipt and warranty card for the duration of warranty. In the case of transportation, pack the product using the original packaging materials only.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	3
DESCRIPTION	4
INSTRUCTIONS FOR USE	5
ACCESSORIES	5
MAINTENANCE AND CLEANING	5
TECHNICAL DETAILS	5
INCLUDED CONTENTS	6
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS ..	7
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES	7

Hot Air Curling Iron

SHS 7401WH

EN

IMPORTANT SAFETY INSTRUCTIONS


- Carefully unpack the product and take care not to throw away any part of the packaging before you find all the parts of the product.
- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- Use extra care if the product is used near children. Always keep the product out of the reach of children. Children must be supervised to ensure that they do not play with the product.
- Before connecting this product to the socket outlet, make sure the voltage stated on the label of the product corresponds to the voltage in your wall socket.
- Never use the product in the near vicinity of a bath, shower or swimming pool.
- Never use accessories, which have not been supplied with this product or which are not designed for this product.
- Make sure that the electric cable and plug cannot get in contact with water or dampness.
- Do not spray the product with water or any other liquid. Do not submerge this product and any of its components in water, or any liquids.
- This product is designed for household use. Do not use it in industrial environment, or outdoors!
- Do not use sprays in the vicinity of the product.
- If you will not be using the product, disconnect it from the electrical grid. Before cleaning or moving proceed in the same manner.
- Do not place the product on or near an electrical or gas stove. Do not place the product near heat producing products such as fireplaces etc.
- Do not use the product if it has a damaged electric cable/electric cable plug.
- In no case should you attempt to repair the product yourself, do not make any amendments to it - danger of electric shock! Entrust all repairs and adjustments of this product to a specialised company/service. Failure to do so will expose you to a danger of voiding the warranty policy.
- In case the electric cord is damaged, have it replaced by an expert service. Do not use the product if it has a damaged power cord/plug.
- Do not place the electric cord of the product near hot surfaces, or over sharp objects.
Do not place heavy objects on the power cord, position the cord so that it is not stepped on, or tripped over. Make sure the power cable does not hang over the edge of a table, or that it does not touch a hot surface.
- Do not disconnect the product from the power point by pulling the electric cord - it may damage the electric cord/power point. Disconnect the cable from the power point by gently pulling the plug of the electric cable.
- Do not use the product for any other purposes than those intended.
- Ensure that when turning on the product, that the air inflow or outflow grill is not covered.
- Ensure that no hair or threads remain in any of the openings of the curling iron.
- In case you use the product in the bathroom, unplug it from the socket after use by removing the plug from the socket, as the presence of water poses danger, even when the curling iron is turned off.
- To insure additional safety, it is recommended to install an Residual Current Device (RCD) into the electric circuit to the bathroom with a maximum current rating of 30 mA. Ask a electrician for advice.
- The manufacturer takes no responsibility for damages caused by the incorrect use of this product and its accessories (injuries, burns, scalding, fire, food spoilage, etc.).



Do not use this appliance near baths, showers, washbasins or other containers containing water.

DESCRIPTION


A

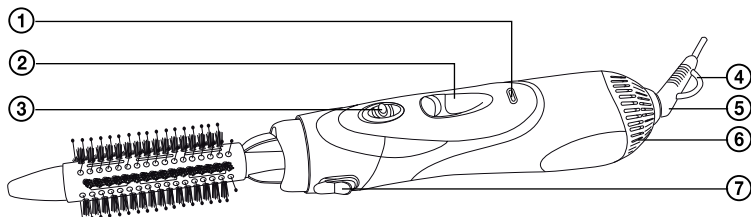

- ① Operation indicator light
- ② Main power switch
0 - Turned off
1 - 1st power level
2 - 2nd power level
- ③ "COOL CARE" button

- ④ Hanging loop
- ⑤ Turning end of the power cord
- ⑥ Air suction opening grill
- ⑦ Safety for attachment release

B

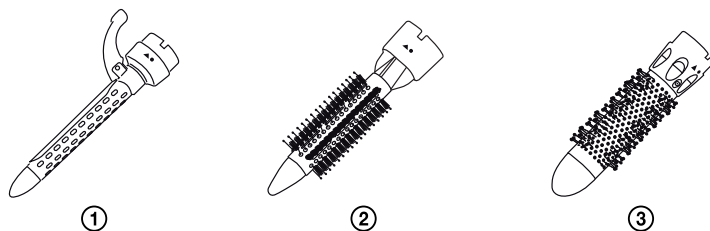

- ① Curling tongs (diameter 18 mm)
- ② Small brush (diameter 20 mm)
- ③ Large brush with flexible pins (diameter 31 mm)

Hot Air Curling Iron

SHS 7401WH

EN

INSTRUCTIONS FOR USE

- 1) Attach an appropriate attachment on to the curling iron so that the arrow on the curling iron and the symbol on the attachment point at each other. Then turn the attachment, to lock in the safety.
- 2) Insert the power plug into the power socket.
- 3) Using the main switch select the desired power level.
- 4) Commence drying / forming your hair.
- 5) After finishing with the curling iron or when the attachment needs to be changed for another, you can remove it by simultaneously pressing the safety while turning the attachment.



Tip:

To achieve the best results wash your hair with shampoo before using the dryer, then dry your hair using a towel to reduce excessive moisture and then comb your hair. We recommend the use of a conditioner or hair lotion, which simplifies the combing and then drying your hair.

"COOL CARE" button

The "COOL CARE" button can be used in combination with any power level and is ideal for fixing a hairstyle after drying with hot air.

Hanging loop

If while drying you need to put the fan down, you can hang it on the hanging loop.

ACCESSORIES

Curling tongs

Ideal for creating curls.

Small brush

Appropriate for shaping fine or relatively short hair, or for combing out.

Brush with flexible pins

Appropriate for shaping of strong and naturally wavy hair.

MAINTENANCE AND CLEANING

- Before cleaning disconnect this product from the power source.
- To clean the outer parts of the product, use a soft cloth dipped in lukewarm water. Do not use aggressive cleaning products and solvents as this could damage the surface of the product.
- After every use we recommend to clean the air opening suction grill, where very often hair is sucked in.

TECHNICAL SPECIFICATIONS

Nominal voltage.....	220 - 240 V AC (alternate current)
Nominal frequency.....	50 Hz
Input power	1000 W
Safety class (with regard to electric shock protection)	II
Noise level.....	78 dB(A)

The declared noise emission level for this appliance is 78 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

SUPPLIED CONTENTS

- 1) Hot air curling iron
- 2) Curling tongs (diameter 18 mm)
- 3) Small brush (diameter 20 mm)
- 4) Large brush with flexible pins (diameter 31 mm)
- 5) User's manual
- 6) Warranty card

Amendments to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Hot Air Curling Iron

SHS 7401WH