

This manual contains a description of the main functions of the mobile phone.

The contents of this manual are correct. The description of some features may vary due to changes in the software or service provider. The company reserves the right to make changes to the specifications without prior notice.

This phone is intended for mobile use, making and receiving calls, sending SMS messages, accessing the Internet (if provided), etc. Turn off your phone if you are near chemical plants, petrol stations and other places where explosive items may be present.

Keep your phone out of the reach of children.

Switch off your phone while on board an airplane, but do not use the phone during flight.

Switch off your phone when there are devices such as pacemakers and other medical equipment that may be affected by your mobile phone's work.

The warranty does not cover non-original spare parts. Never try to disassemble your phone yourself. If necessary, contact the service.

Do not charge the phone without a rechargeable battery. The phone should be recharged in a well-ventilated place and away from lightly flammable and explosive items.

To prevent demagnetization, keep your phone away from such items as magnetic disks and credit cards.

Avoid getting liquid on your phone. If the liquid

enters the machine, it is necessary to remove the battery and contact the service.

Do not use the phone in places with very high or very low temperatures. Never leave your phone exposed to direct sunlight, high humidity or dust.

Do not rinse the phone with water and do not use harsh detergents.

Wireless phones are sensitive to radio interference, which may affect the operation of the device.

Use only accessories and accumulators recommended by the manufacturer.

Only use the appliance in its normal operating condition, as specified in the instruction manual.

Do not throw the battery in fire!

In order to avoid the ingestion of heavy metals, acids, alkali in water or soil that causes significant damage to the environment, dispose of the spent battery after expiration of service in accordance with the requirements of the law. For non-compliance with the rules of utilization legislation there is a legal responsibility.

Information on the safe disposal of lithium-ion batteries is available at the nearest specialized service center.

*Note: The manufacturer of the device reserves the right to complete the battery of the battery other than the specified characteristics.*

## **Specification**

Dual SIM, GSM900/1800

Screen – 1.77 inch, color, 160\*128 dpi

Battery – 1450 mAh

Size 116\*54\*12 mm

## **Package**

Phone – 1pc

Battery – 1 pc

Charger – 1 pc

Headphones -1 pc

 
Manual – 1 pc

Warranty card – 1pc

# Installing the SIM Cards and the Battery

Open the battery compartment cover

Remove the battery

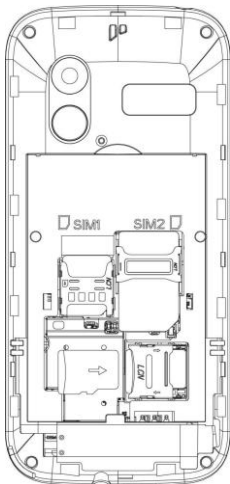


Insert the SIM card into the appropriate grooves according to the drawings on the phone

If necessary, install a memory card

Install the battery

Close the battery compartment cover


## The exterior of the phone

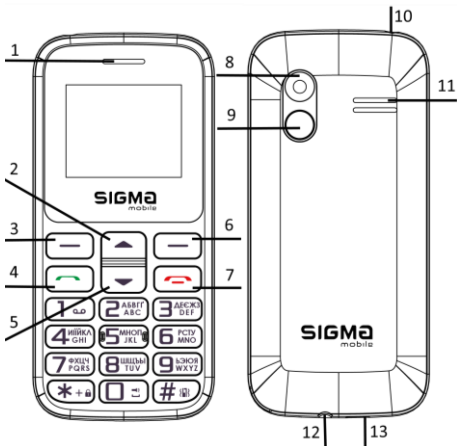 

1	Receiver
2	Navigation key Up
3	Left Soft Key (LSK)
4	Dial key
5	Navigation key Down
6	Right Soft Key (RSK)
7	End Key

8	Camera
9	SOS key
10	Torch
11	Speaker
12	Audio port
13	microUSB port


## Powering On/Off the Mobile Phone


 

To switch the phone on / off press and hold the End key  for a while before turning the phone on / off.


## Lock and unlock the keypad

Press LSK and then \* to lock / unlock the phone keypad.

 

## Buttons

	Function
 Dial key	In Idle mode: View the call log. During an incoming call: Receive an incoming call. Call: to dial a dialed number. In the








	<p>settings menu, the confirmation of action (the OK key), and to go to the Options menu</p>
 <p>End key</p>	<p>Short press: to reject an incoming call. Press and hold: to switch the phone on / off. In FM radio mode, short press: to exit the FM radio menu (with background playback).</p>
 <p>Directional keys: Up/Down</p>	<p>In the menu: Use the keys to go to the desired menu or function. In call mode and when playing audio: to adjust the volume of the sound.</p>
 <p>LSK/RSK Left and</p>	<p>LSK: In standby mode, go to Menu. To select options when configuring. RSK: In Idle mode, go to Contacts; return to the previous</p>

Right soft key	menu. FM radio mode to exit the FM radio menu
 SOS	Press and hold - activates the SOS function (the phone will automatically make a call to the assigned emergency numbers and send an SOS message)
0	Short press: for input "0" Press and hold: On/Off Torch
2-9	Short press: for input "2" ... "9" Press and hold: Speed dial
*	Short press: for "*", "+". Press LSK and then *: Lock / Unlock the keypad.
#	Short press: for "#". Press and hold: switch to silent mode / normal mode.

## Icon on the screen

<i>Icon</i>	<i>Content</i>
	Network Indicator
	Battery charge level



	Unread SMS message
	Missed call
	Alarm is on
	Silent profile activated
	The "Meeting" / "Vibro" profile is activated
	The "Outdoor" profile is activated
	Bluetooth is ON

## Make a call

Dial the phone number using the numeric

keypad on your phone or go to the call log and press the Call button to make a call. You can also make a call from the Contacts menu by selecting the phone you want.

## **Speed Dial**

Go to Menu -> Contacts -> Options -> Others-> Speed Dial.

In this menu you can save eight phone numbers for speed dial, which correspond to numbers 2-9 on the phone keypad. Phone numbers need to be entered. Long press key 2-9 in standby mode will call the given number.

## **SOS dial**

You can save 5 numbers for an emergency call. To enable / disable the function, go to the SOS-> SOS settings menu in the main menu. To add numbers go to the menu to SOS-> SOS numbers, to edit the message, select SOS-> SOS message settings.

Pressing and holding the SOS button will automatically send SMS and make alternate calls (3 attempts) from the list of configured phone numbers.

## **Receive a call**

When you receive a call, click the Call button to accept the incoming call. Click the End button if you want to reject an incoming call.

## **Sound mode (User Profiles)**

Ringtones, volume and other settings are configured in User Profiles (Menu-> Settings-> Profiles)

## **Contacts (Phonebook)**

The Phonebook serves to search for saved contacts, add new contacts, copy / move contacts from phone to SIM card and vice versa, add to blacklist and set speed dialing.


*Ways to save a new contact in the phone book:*

1. Save a dialed, received, or missed call log number: In the call log, tap Options-> Add to contacts.
2. Save a new contact directly from the Contacts menu: Menu-> Contacts-> Options-> New contact

## **Messages**

## *Inbox*

When a new message arrives, a melody will sound and an icon will appear at the

top of the screen 

To read the received message, go to the Messages menu.

*View messages through the Inbox menu.*

Go to Menu-> Message -> OK-> Inbox.

Choose from the list of messages that you want to view using the navigation keys.

*Functional operations when viewing SMS:*

View: read the message;

Delete: delete the selected message;

Reply: reply to this message;

Forward: forward this message to another contact;

Call: make a call to the sender of the message;

Add sender to phonebook.

*Write an SMS message*

Go to Menu-> Messaging -> Write

message.

Enter the text of the message. Note: To change the input method when writing a message, press the "#" key. To send the message, press Options-> Input number, after entering the number Options-> Send. If necessary, save the message without sending, press Options-> Save.

*Save sent messages:*

By default, sent messages are saved. To not save sent messages, go to Messages-> SMS Settings- and turn off "Save sent messages". After activating this function, the sent messages will not be stored in the Sent Items folder..

*Message settings*

Go to the Messages menu-> SMS Settings to configure: SMS service center for each SIM, turn on / off the Delivery report, Voice mail settings, message storage settings - SIM or phone.

# Multimedia

**Caution:** *It is desirable to use the following functions in the menu "Multimedia" under the condition of the installed memory card.*

## Gallery

In the main menu, go to Multimedia -> OK -> Image. This menu allows you to view, send, delete, rename images and use them as wallpaper.

## Audio

To enable the audio player, go to the main Menu->Multimedia -> Audio Player.

You can use the phone's audio player to listen to music files stored on the phone's memory card.

**Caution:** *To automatically create a playlist, files must be in the My Music folder on the memory card.*

With the "Options" menu, you can play, add, edit the music list, and choose the listening mode through the settings.

For Play / Pause, use the 0 key

To move to the next / previous song - use keys \* and # respectively.

To adjust the volume use Up and Down keys.

### *Sound recorder*

In the main menu, go to Multimedia-> Recorder. Use the "Options" menu to select the one you want: create a new entry, view existing records. You can also configure the file format and storage location

### *FM-radio*

For FM radio, go to Menu-> Multimedia-> FM Radio.

To exit the FM radio, press the Exit button.

Pause / Play: Press the 0 key.

To go to the next / previous station - press keys \* and # respectively. To adjust the volume use Up and Down keys.

Press Options to Automatically Search and Save Channels, browse the saved channels list, enable / disable background playback.

## **Tools**

### *Calendar*

To go to the Calendar menu, go to the main

Menu->Tools -> Calendar. You can create / view / edit events.

### *Alarm*

In the main Menu go to - Tools -> Alarm. In this menu, you can set 3 Alarms by adjusting the time, melody and repeat mode: 1 time, daily, weekly. To edit click 0 key. To On / Off press RSK

### *Calculator*

In the main menu, choose Tools -> Calculator, which allows you to perform simple arithmetic operations. Enter a number and use the navigation keys to select the desired action.

The Tools menu also has Sokoban and Snake games, Stopwatch, Ebook, Torch on/off, Bluetooth settings and operator services menu.

### **Call logs**

Go to Menu-> Call Logs to view received, dialed and missed calls. For each call, the following options are available in the Options menu: View details, Call



subscriber, Write message, Add to contacts, Add to blacklist, Delete

## **Settings**

### *Call settings.*

Go to Settings-> Call Settings:

- Dual SIM: scripts for using SIM cards; In this item you can also specify the name of the SIM card
- Call divert;
- Call barring;
- Call waiting;
- Auto-record calls (required microSD card)

### *Phone settings*

The following options are available:

- Time and date;
- Language;
- Shortcut settings;
- Auto power on/off
- Restore factory settings.

This function restores some of the settings of the mobile phone to their factory values. To use the factory reset function, you must enter the correct mobile phone password.

## **Important! Reset code is 1122**

### *Display settings*

Select a background image, brightness and contrast. Set the display and keyboard backlight time.

### *Profiles*

Go to the main menu and go to Settings -> Profiles. There are 5 predefined User Profiles: Normal, Silent, Meeting, Indoor, Outdoor. Each profile contains settings for Call and SMS, Sound volume, Other sounds: Key tone, Battery low alert, Dial tone. To configure your profile, click Options-> Settings. To activate the profile, press Options->Activate.

### *Security*

- Blocking of the card by PIN code: activating / deactivating the function, changing the PIN;
- Phone lock (on / off). When you turn on the feature, each time you turn on the phone, you will be asked for a password;
- Change the password for locking the phone;

- Auto-lock keypad settings (Off / 5s / 15s / 30s / 1min / 5min). To confirm the selection, press OK (LSK)
- Setting up a black list of phone numbers
  - numbers that will not receive calls
- Guardlock function setup. The function does not allow the phone to work when changing the SIM card. When you first set up, you must enter a password that will be tied to the installed SIM. When changing SIM you will need to enter a password without which the phone will not work.
- Blacklist settings are phone numbers that will not be answered
- Set up a whitelist of phone numbers. Only whitelisted subscribers can call.

## Troubleshooting

If you encounter problems, please refer to the table below before applying to a service center.

<b>Common problem</b>	<b>Possible solution</b>
Unable to switch	Check whether the battery

<p>the phone on</p>	<p>power is sufficient. Please charge the battery. Check battery contacts. Remove and put the battery back to phone. Power on.</p>
<p>SIM-card error</p>	<p>Check SIM contacts, integrity. Use clean fabric to clean contacts. If Sim-card doesn't work you should contact to your service provider.</p>
<p>Poor signal</p>	<p>Check the level of signal on an indicator that is located in the right corner of the screen. 5 bars indicate strong signal, less than 2 bars indicate weak signal.</p>
<p>Unable to dial out</p>	<p>Move to the area with better network signal. If Sim-card doesn't work you should contact your service provider.</p>

Unable to connect the network	The signal is weak, or there is interference problem. Please contact your network operator.
Unable to enter to SIM menu	Your SIM-card do not support this function.