



SENCOR®

SWK 1031SS

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised with previous use of similar types of appliances. Use the appliance only as described in this user's manual. Store the user's manual in a safe place for future reference.

We recommend saving the original shipping cardboard box, packaging material, receipt and warranty for the period of the warranty at minimum. In case of transportation, pack the product using the original packaging materials only.

CONTENTS

Important safety instructions.....	3
Description of kettle.....	5
Operation of kettle	5
Cleaning the kettle and filter.....	6
Technical specifications	6
Handling instructions for the disposal of used packaging material.....	7
Electronic and electric appliance disposal instructions.....	7

IMPORTANT SAFETY INSTRUCTIONS

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children younger than 8 years of age.
- Children must not play with the appliance.

IMPORTANT SAFETY INSTRUCTIONS
READ CAREFULLY AND STORE FOR FUTURE USE.

- Before connecting the variable temperature kettle to a power socket check that the voltage stated on the rating label matches the electrical voltage in the socket.
- Connect the variable temperature kettle only to a properly grounded socket.

**Attention:**

This variable temperature kettle is not designed to be controlled using a programmed device, external timer switch or remote control.


- The variable temperature kettle is designed for domestic use and similar places such as:
 - staff kitchens in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - bed and breakfast establishments;
 - agricultural farms.
- Do not use the variable temperature kettle outdoors.
- Do not place the variable temperature kettle on window sills or on unstable surfaces. Always place the variable temperature kettle on a stable, even and dry surface.
- Never use the variable temperature kettle in the near vicinity of a bath, shower or swimming pool.


**Warning:**

Do not submerge the variable temperature kettle or its base in water or any liquids.

- Only use the variable temperature kettle with the base that was supplied with it. Do not use the base supplied with this variable temperature kettle for other types of kettles.
- Use the variable temperature kettle only for boiling water.
- If the variable temperature kettle is overfilled, then boiling water could splash out.
- Don't move the kettle lid or open it while the water is boiling.
- The body of the kettle is heated up while water is boiled. Do not touch the hot surface. This could cause skin burns. Use the handle for lifting and carrying the variable temperature kettle.
- Pay extra attention when handling a kettle filled with hot water.
- The variable temperature kettle is protected against damage caused by accidentally running it without water.
- If the variable temperature kettle is running, do not leave it unattended.
- Always disconnect the variable temperature kettle from the power socket if you will not be using it or before moving or cleaning it.
- Do not place the variable temperature kettle on an electric or gas stove or in its vicinity, do not place it in the vicinity of an open fire or an appliance that is a source of heat.
- Ensure that the power cord does not come into contact with water or moisture.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table, or that it does not touch a hot surface.
- Do not disconnect the variable temperature kettle from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- Do not use the variable temperature kettle if it has fallen on the floor, has visible signs of damage or if it is leaking.
- If the power cord is damaged, have it replaced at an expert service centre. It is forbidden to use the variable temperature kettle if it has a damaged power cord or plug.
- To avoid the danger of injury by electrical shock, do not repair the variable temperature kettle yourself or make any adjustments to it. All repairs of this variable temperature kettle should be carried out at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty policy.

Description of kettle

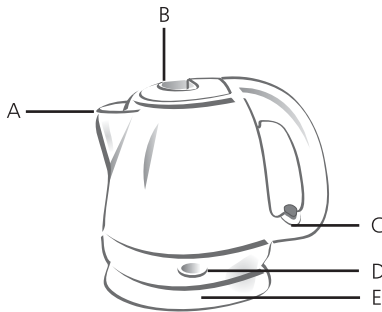

- A – Spout with removable filter inside
- B – Lockable lid
- C – Switch  – On/Off
- D – Indication switching light
- E – Stand with central connector

Operation of kettle

Prior to use, remove all packaging material from the kettle. Set the required length of the electric cable. Press the electric cable into the groove in the stand.

Place the stand on a stable, flat and dry surface.

Fill the kettle with the required amount of water. You can fill the kettle by the spout, or by opening the lid. The water must cover the guideline minimum and must not exceed the guideline maximum.

Warning! In case the kettle is overfilled, this can lead to the spurting of boiling water.

Place the kettle on the detachable stand.

Insert the plug into the electric socket.

To turn the kettle on press switch with the symbol  down. Note: Prior to turning it on, make sure the lid is well shut.

As soon as the water is boiled, the kettle will be turned off automatically.

Prior to removing the kettle from the stand, make sure it has been automatically turned off first. In case it is not automatically turned off, turn it off manually.

After use, remove the electric cable from power point and let the kettle cool.

Never fill the kettle while placed on the removable stand.

Do not turn on the kettle and use it without water. Incorrect use may adversely affect the operation life of the appliance.

In case you accidentally turn on the kettle without water, the thermoregulator automatically cuts off the electric circuit once it has reached a certain temperature and the light control turns off. After several minutes, once the stainless-steel bottom has cooled, it is possible to use to kettle again.

Cleaning the kettle and filter

The removable filter serves to hold back limestone and prevents it from getting into the cup when water is being poured. It is necessary to clean the filter under running water on a regular basis.

Remove limestone scales on a regular basis, at least 1 x month.

To remove limestone scales, you can use:

- 8 % white vinegar, readily available in shops. Fill the kettle with ½ l of vinegar and let it stand for 2 hours. Then empty the kettle and boil clean water 4-5 times prior to use.

- citric acid. Boil ½ l of water in the kettle, add 30 g of citric acid and let it stand for 30 minutes. Then empty the kettle and boil clean water 4-5 times prior to use.

To clean the exterior part of the kettle use a dry cloth or a cloth dampened in a weak solution of neutral dish liquid.

To clean the stand, only use a dry cloth.

To clean the kettle, its components or accessories, never use cleaning agents that cause scratches, gas, thinners, etc.

Technical specifications

230 V ~ 50 Hz, 2000 W

Volume 1 l

Handling instructions for the disposal of used packaging material

Dispose of the packaging material in the designated place for waste disposal.

Electronic and electric appliance disposal instructions



Information for users for the disposal of electric and electronic devices
This symbol on products or original documents means that used electric or electronic products must not be added to standard communal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product.

Through the correct disposal of this product you will help retain valuable natural resources and prevent potential negative effects on the environment, which could result from its incorrect disposal of waste. Ask about other details at the local council or at the nearest collection point. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic EU regulation requirements that relate to it.

Changes in the text, design and technical specifications may change without prior notice and we reserve the right to make these changes.