



EN ■ Coffeemaker

Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance must not be used by children. Keep the appliance and its power cord out of reach of children. This appliance may be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or instructed how to use the appliance in a safe manner and understand the potential danger. Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- This appliance is designed for household use only. It is not intended for use in locations such as:
 - staff kitchens in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - agricultural farms;
 - bed and breakfast establishments.
- Do not submerge the appliance, the power cord or the power plug in water or in any other liquid.
- Prevent the power cord and power plug from coming into contact with water or another liquid.
- Use the appliance according to the instructions in the user's manual. Otherwise, injuries, damage to the appliance or a dangerous situation may result.



Attention:
Hot surface.

- As a result of residual heat, accessible surfaces of the appliance are hot during its use and afterwards. Do not touch hot surfaces.
- The appliance is intended exclusively for brewing filtered coffee or making tea. Use the appliance only for the purposes for which it was designed.
- Before connecting the appliance to a power socket, check that the rated voltage on its rating label matches the electrical voltage in the power socket.

- Connect the appliance only to a properly grounded socket. For safety reasons, we do not recommend using multi-socket adapters or extension cords.
- Do not place the appliance on window sills, kitchen sink drainboards or unstable surfaces. Always place it on a stable, even and dry surface.
- Do not place the appliance on or near an electrical or gas stove, or in the vicinity of an open flame.
- Never use the appliance in the near vicinity of a bath, shower or swimming pool.
- Do not use the hotplate and lid of the appliance as a shelf for placing items.
- Only use the appliance with the original accessories that came with it.
- Use the appliance with the glass kettle that came with it. Do not overfill the glass kettle or place it on other sources of heat or use it for heating liquids or food in a microwave oven.
- Do not use the appliance with a glass kettle that is cracked or that has a loosened or damaged handle, etc. If the kettle exhibits any signs of damage, it must be replaced with a new one.
- The appliance must not be used without the filter holder and the coffee filter. Never put ground coffee or tea leaves directly into the filter holder.
- Hot steam is released from the vents during operation. For this reason, provide the appliance with at least 20 cm of clearance space.
- Fill the water tank with clean cold water. Do not pour hot water or other liquids into it or place any items inside it. The maximum capacity of the water tank is 1.8 litres. Do not overfill the water tank.
- Before turning on the appliance, make sure that the water tank is filled with a sufficient amount of water, that the lid of the appliance is properly closed and that the kettle is placed on the hotplate. The water level in the water tank must not exceed the maximum mark.



Attention:

Do not open the lid while brewing tea or coffee. Do not touch the hot surface of the hotplate or the glass kettle. This could cause burns. Use the handle for lifting and carrying.

- Pay extra attention when handling the kettle filled with hot liquid to prevent scalding.
- Do not submerge a heated kettle in ice-cold water. Do not leave an empty kettle sitting on the hotplate when it is turned on. This could damage it.
- Regularly inspect the water level in the water tank when using the appliance. When the water level falls below the minimum water level mark, add water.

Before adding water, first turn the appliance off and disconnect it from the power socket.

- Before using the appliance again, turn it off and allow it to cool down for 10 minutes.
- The appliance is equipped with a safety thermal fuse that automatically cuts off the electrical circuit when overheating occurs. In the event that such a situation occurs, disconnect the appliance from the power socket and allow it to cool down. After it has cooled down, you may continue using the appliance. Do not fill the water tank with cold water for the purpose of cooling down the heating element.
- Always turn off the appliance and disconnect it from the power socket when not using it, when leaving it without supervision, before disassembling or assembling it, before filling up the water tank, and before moving or cleaning it. Allow the appliance to cool down before cleaning or moving it.
- Keep the appliance and its accessories in clean condition. Clean and maintain it according to the instructions in chapter Cleaning and maintenance. Never wash the appliance under running water or submerge it in water or another liquid.
- Never move the appliance with the water tank filled with water or with the kettle located on the hotplate.
- Make sure that the power cord does not come into contact with a hot surface and prevent the power plug from coming into contact with water.
- Disconnect the appliance from the power socket by pulling on the plug, never pulling on the power cord. Otherwise, this could damage the power cord or the socket.

To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.




Warning:

Risk of injury - During the coffee brewing process, it is necessary to return the kettle to its place within 15 seconds. There is a risk of hot coffee overflowing in the permanent filter, which may cause serious injuries.




Before using the product, thoroughly read all the operating instructions.

A

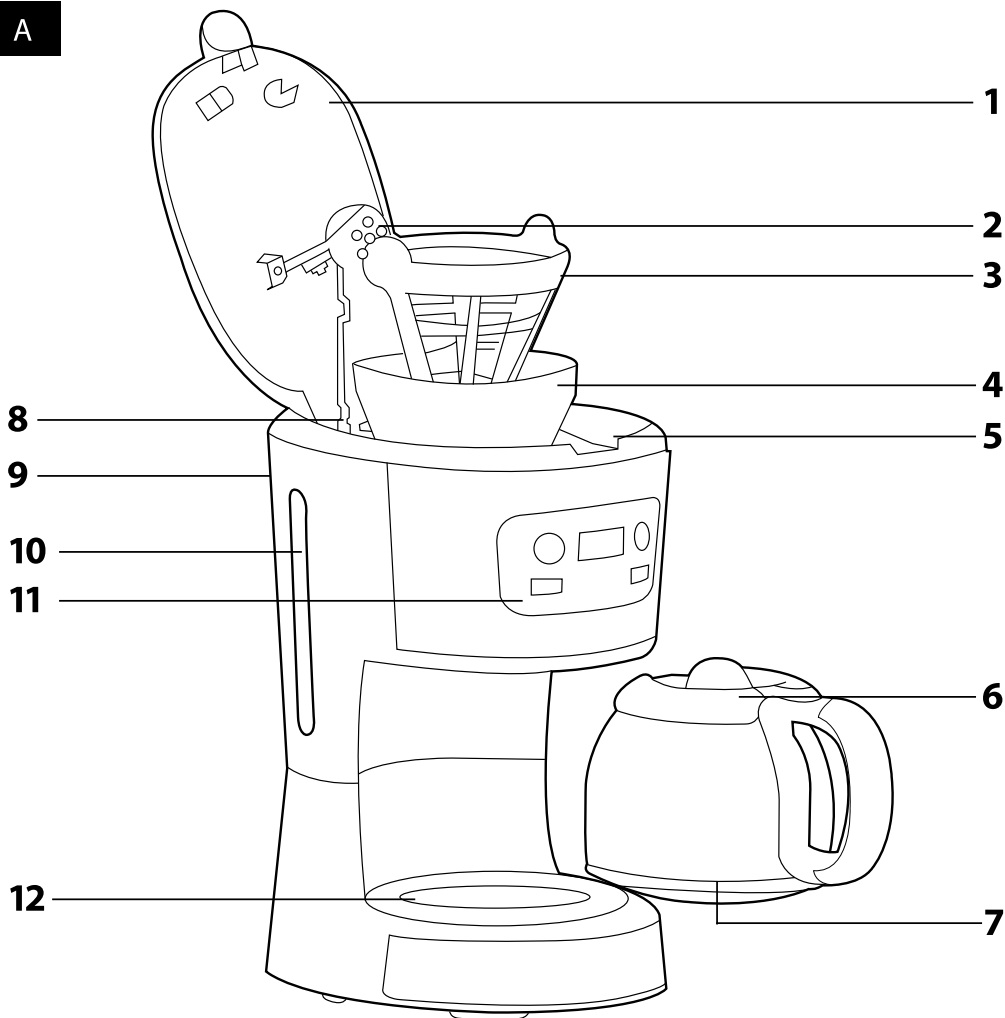

B

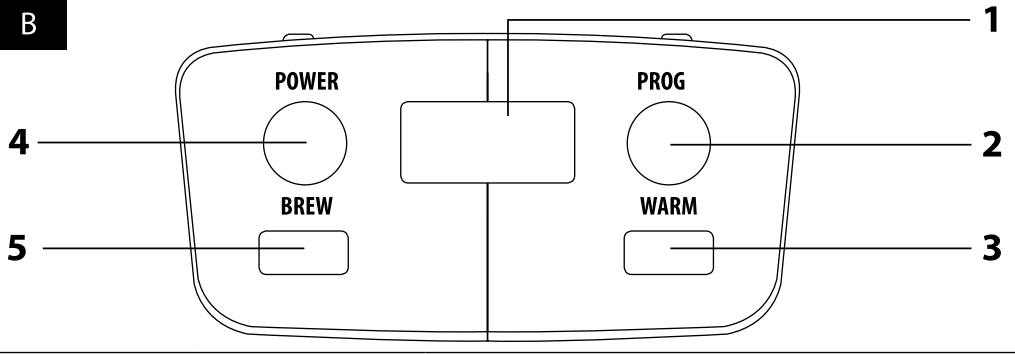

EN Coffeemaker

User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

| | |
|---|-------------------------------------|
| A1 Lid of the water tank and steam chamber | A6 Glass kettle lid |
| A2 Hot water dispensing nozzle | A7 Glass kettle |
| A3 Permanent removable filter | A8 Water tank filling funnel |
| A4 Removable filter holder with closable Drip-Stop valve | A9 Water tank |
| A5 Steam chamber | A10 Water level mark |
| | A11 Control panel |
| | A12 Hotplate |

DESCRIPTION OF THE CONTROL PANEL

| | |
|-----------------------|------------------------|
| B1 Display | B4 POWER button |
| B2 PROG button | B5 BREW button |
| B3 WARM button | |

BEFORE FIRST USE

- Before first use, take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the appliance nor any of its parts is damaged.
- Thoroughly wash the permanent filter **A3**, filter holder **A4**, kettle lid **A6** and glass kettle **A7** in warm water with a small amount of neutral kitchen detergent. Rinse under clean running water and dry well.
- Wipe the coffeemaker with a soft sponge lightly dipped in warm water. Then wipe with a dry wiping cloth.

Setting the time

1. Insert the power plug into a power socket and "12:00" will start flashing on the display **B1**.
2. Hold down the **BREW B5** button and set the hours.
3. Now, hold down the **WARM B3** button and set the minutes.
4. The set time will flash five times and the value will be saved in the memory of the coffeemaker.



Note:

The clock on the coffeemaker uses a 24-hour system. The coffeemaker can also be operated without the time being set. However, if you wish to use the automatic start function, it is important to set the time.

Putting the coffeemaker into operation

- Before first use or after an extended period of time when the coffeemaker was not used, it is important to clean the coffeemaker with clean water without any ground coffee in the filter **A3**. Proceed as follows:
1. Open the lid **A1** and pour clean cold water into the water tank **A9** up to the maximum level mark. Never fill the water past the maximum mark.
 2. Insert the filter holder **A4** and the permanent filter **A3** into the steam chamber **A5**. Check that both parts are correctly inserted in the steam chamber **A5**. Close the lid **A1**.
 3. Place the glass kettle **A7** on to the hotplate **A12**.
 4. Insert the power plug into a power socket and the time will start flashing on the display **B1** if it was set previously, otherwise "12:00" will start flashing.
 5. Press the **POWER B4** button. The button will be lit and after a short moment the water will start dripping into the kettle **A7**.
 6. Wait until all the water in the water tank flows through the filter into the glass kettle.
 7. As soon as the water tank is empty, the coffeemaker will beep and automatically switch to the KEEP WARM mode.
- Now the coffeemaker is clean, warm and ready for use.



Note:

During the cleaning and coffee brewing process, the pump will make a rattling noise. This is normal.

OPERATING THE COFFEEMAKER

Brewing coffee

1. Open the lid **A1** and pour clean cold water into the water tank **A9** up to the maximum level mark. Never fill the water past the maximum mark.
2. Insert the filter holder **A4** and the permanent filter **A3** into the steam chamber **A5**, or alternatively place a disposable paper filter (size 4) into the filter holder **A4**. Check that both parts are correctly inserted in the steam chamber **A5**.
3. Pour a sufficient amount of ground coffee into the permanent filter **A3** (or into the

disposable paper filter). Use ground coffee specifically intended for this type of appliance exclusively. As a rule, you will need a full tablespoon or ground coffee for a single cup of coffee. Nevertheless, the amount of ground coffee can be modified to suit one's preferences.



Note:

If you wish to brew tea, pour a corresponding amount of tea into the permanent filter **A3**. Disposable paper filters are not included.

4. Close the lid **A1**.
5. Place the glass kettle **A7** on to the hotplate **A12**.
6. Insert the power plug into a power socket and the time will start flashing on the display **B1** if it was set previously, otherwise "12:00" will start flashing.
7. Press the **POWER B4** button. The button will be lit and after a short moment the coffee brewing process will start automatically. Finished coffee will flow into the kettle **A7**.



Note:

If you need to interrupt the coffee brewing process, press the button **POWER B4**. Press the **POWER B4** button again to resume the brewing process. The glass kettle **A7** can be taken out of the kettle and coffee can be served. The brewing process will automatically be interrupted, however, the duration of the interruption must, in this case, not exceed 30 seconds. There is a risk of the coffee in the permanent filter **A3** overflowing and damaging the appliance.

8. As soon as the coffee brewing process is finished, the coffeemaker will automatically switch to the KEEP WARM mode, in which the hotplate **A12** will heat the coffee for 40 minutes. To keep the coffee warm, always place the glass kettle **A7** on the hotplate **A12**. If the glass kettle **A7** is empty, do not place it on the hotplate **A12**. This could damage it.



Note:

Allow the coffeemaker to cool down for approx. 10 minutes before using it again. Otherwise, there is a risk of it overheating and subsequent damage.

9. When not using the coffeemaker, turn the coffeemaker off with button **POWER B4** and disconnect the power plug from the power socket. Allow the coffeemaker to sufficiently cool down and then clean it according to the instructions in chapter "Cleaning and maintenance".



Attention:

Be very careful, when pouring coffee from the kettle **A7**. The coffee is very hot. Carefully pour out the coffee at an angle no greater than 45°. If you were to pour the coffee out too fast at too steep an angle, the lid could come loose and scalding from very hot coffee could result.



Attention:

Do not touch the hotplate **A12** while the coffeemaker is in operation. The hotplate **A12** is very hot and presents a risk of burns.

Automatic start

- The coffeemaker is equipped with an automatic start function. Thanks to this function, you will be able to start the coffeemaker at a time of your choosing. Before setting this function, check that you have properly set the time – see chapter "Setting the time".
1. Perform steps 1 – 6 from chapter "Brewing coffee".
 2. Hold down button **PROG B2**. There will be a beep and the time and "auto" will start flashing on the Display **B1**.
 3. While the digits on the display **B1** are flashing, use buttons **BREW B4** and **WARM B3** to set the time when the coffeemaker should turn on automatically. Use button **BREW B4** to set the hours, and button **WARM B3** to set the minutes.
 4. To confirm the setting, press button **PROG B2**. The time when the coffeemaker will turn on automatically will appear on the display **B1** for a short moment and then the current time and "auto" will be shown.



Note:

If you do not confirm the automatic start time by pressing button **PROG B2**, the time will not be saved and the coffeemaker will not start automatically. The automatic start setting is correctly set when "auto" is shown on the display **B1**.

5. When the start time for the coffeemaker is reached, a beep will be made and the button **POWER B4** will be lit. After a short moment, the coffee brewing process will start automatically. "auto" will disappear from the display **B1**.



Note:

If you need to cancel the automatic start function, press button **POWER B4** and the coffee brewing process will start automatically within a few moments.

If you wish to change the automatic start time, again perform the steps 2 – 4 above.

**Note:**

In the event of a power outage lasting less than 10 seconds, or if the power plug is accidentally disconnected from the power socket for less than 10 seconds, while the coffeemaker is running, then the coffeemaker will automatically continue brewing from the moment of the power outage. If the power outage time is longer, it will be necessary to re-enter the settings and start the coffeemaker again.

Coffee brewing tips

- Keep the coffeemaker in a clean condition. Regularly remove limescale deposits that may negatively affect the flavour of the brewed coffee. More information can be found in chapter "Cleaning and maintenance".
- Always use good quality clean cold water.
- Store ground coffee in a cool, dry place. After opening the ground coffee packet, take care to reseal it well and consume the coffee within two weeks. It is better to purchase smaller packets of ground coffee.
- To achieve an even more delicious flavour, prepare coffee from freshly ground coffee beans.
- Do not prepare coffee from already used ground coffee.

CLEANING AND MAINTENANCE

- Disconnect the power plug from the power socket and allow the appliance to cool down before cleaning it.
- For cleaning, do not use cleaning products with an abrasive effect, solvents, etc. that could damage the appliance. No part of this appliance is intended for washing in a dishwasher.

**Warning:**

Prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug into water or another liquid.

Cleaning the filter and holder

- Before taking out the holder **A4** and the permanent filter **A3**, make sure that both parts have cooled down completely. The holder **A4** and the permanent filter **A3** are very hot both during and after the coffee brewing process. Remove the used coffee out of the permanent filter **A3**. This can be thrown out with household waste or composted.
- Carefully wash the permanent filter **A3**, filter holder **A4** in warm water with a small amount of neutral kitchen detergent. Rinse under clean running water and dry thoroughly.

Cleaning the glass kettle and lid

- Pour any unused coffee out of the glass kettle **A7**, open the lid **A6** and allow the glass kettle **A7** to cool down completely. It is important to clean the glass kettle **A7** and lid **A6** after every use. This will prevent the formation of deposits, which may negatively affect the flavour of the brewed coffee and shorten the lifespan of the glass kettle **A7**.
- Rinse out the glass kettle **A7** with warm water and wash it together with the lid **A6** in warm water with a small amount of kitchen detergent. Rinse under clean running water and dry thoroughly.

Cleaning the outer surface of the coffeemaker

- Before cleaning the outer surface, make sure that the coffeemaker has cooled down completely, especially the hotplate **A12**. Wipe the outer surface of the coffeemaker, including the hotplate using a sponge lightly dipped in warm water. Wipe dry using a clean wiping cloth.

Removing limescale deposits

- Over time, limescale deposits may form in the coffeemaker, which may negatively affect the flavour of the brewed coffee and shorten the lifespan of the coffeemaker. It is important to regularly remove limescale deposits.
- Pour a solution of water and descaling agent into the water tank **A9** up to the maximum mark. Follow the instructions on the packaging of the agent.

**Note:**

The descaling agent can be purchased in ordinary retail chains. Always use a descaling agent intended for home coffeemakers. Alternatively, citric acid or an 8% white vinegar solution in the recommended 2:1 ratio.

- Place the glass kettle **A7** on the hotplate **A12**.
- Press button **POWER B2** and the button will be lit. The coffeemaker will start after a few moments.
- Allow approximately one cup of solution to flow into the glass kettle **A7** and then turn the coffeemaker off using button **POWER B2**. Allow the heated solution to act for about 15 minutes.
- Then turn the coffeemaker on again and allow all the contents of the water tank **A9** to flow into the kettle **A7**.
- Pour the solution out of the glass kettle **A7** and rinse it out.
- Pour clean cold water into the water tank **A9** up to the maximum mark and again allow all the contents of the water tank to flow through the coffeemaker. Repeat this process 2 – 3 times.

Storage

- When not using the appliance for an extended period of time, disconnect the power plug from the power socket, allow the appliance to cool down and clean it according to the instructions in chapter "Cleaning and maintenance".
- Before storing it, check that the appliance and all its accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

TECHNICAL SPECIFICATIONS

| | |
|--------------------------|--------------|
| Rated voltage range..... | 220 – 240 V~ |
| Rated frequency..... | 50 – 60 Hz |
| Rated power input..... | 700 W |

**Safety class for electrical shock protection:**

Class II – Electrical shock protection is provided by double or heavy-duty insulation.

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.