

We thank you for buying mobile phone X-style 241. This manual includes description of main mobile phone functions .

The phone X-style 241 allows to use 2 SIM cards of GSM standard at Dual Standby mode, i.e., in standby mode there are 2 cards in the connection; during the call 1 card works in active mode, 1 other card are unavailable.

*The content of this manual is right. The description of some functions may differ due to changes in software or provider services. The company keeps the right to arrange changes in technical specifications without previous warning.*

*Key remarks in security technics.*

Given phone is assigned for calling and receiving calls, sending SMS messages, surfing the Internet (may be unavailable) etc.

Read carefully the below section and strictly keep following instructions.

The phone doesn't contain any materials harmful for health.

- Don't use the phone during the thunderstorm in the open air.
- Keep the battery off from high temperature, explosive and flammable liquids.
- Power the phone off in case if using the phone can cause the obstacle or danger.
- Do not put the prone in heating devices such as microwave oven, hot plate or heater.

- Do not try to open the mobile phone's case. If phone or any of accessories do not work properly, please contact the closest authorized service center.
- Use only accessories and charging devices assigned to this model. Do not use defective or second hand chargers.
- Do not let the battery short circuit happen.
- If you use any personal medical devices, please clarify from producer whether device has sufficient protection from radiation in radio-spectrum. Power the phone off in medical institutions if it is required with inner regulation rules.
- Do not use the phone during driving. Follow mobile phone using recommendations while driving.
- Keep the phone, all its components and accessories in a place unavailable for kids and pets. They may damage the device or accidentally choke with small details.
- Avoid contacting phone with water.
- Do not use potent chemicals, dissolvents or bleaches for cleaning the phone.
- Do not subject the device under the effect of direct sun rays.
- To avoid getting heavy metals, acids, chemicals in water or ground what cause significant damage to environment, wasted accumulator battery should be utilized after end of service term in accordance to the law regulations. Juristic responsibility occurs in case of failure to comply with legislation.

Data about safe utilization of lithium-ion batteries may be obtained in the closest specialized service center.

 
## Specifications

Phone	2 SIM (mini-SIM) GSM: 850/900/1800/1900 MHz
Messages	SMS
Bluetooth	V3.0
Display	2,4", colour LCD, 240*320 pix
Supporting formats	MIDI, AAC, MP3, WAV, JPG
FM-radio	87,5-108,0 MHz (built-in antenna)
Micro-SD	till 32 Gb
Battery	Li-Ion, 800 mAh

Package includes:

- Mobile phone
- Battery
- Charging device
- User manual
- Warranty card

## Phone buttons.

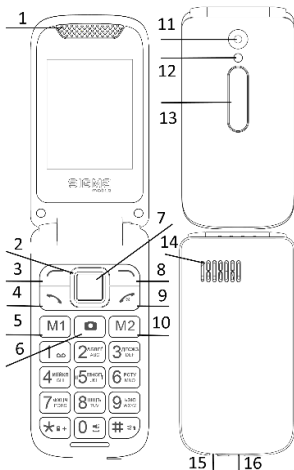

1	Receiver
2	Navigation buttons
3	Left soft key (LSK)
4	Calling\receiving call
5	Speed Dial M1 key
6	Camera On key
7	Central (OK) key


8	Right soft key (RSK)
9	Rebound\Cancel\ (long pressing - to power on or power off phone)
10	Speed Dial M2 key
11	Camera
12	Flashlight
13	Information panel - 3 LEDs that show missed calls and SMS and the battery charging process
14	Speaker
15	Audio port (3.5mm)
16	microUSB port

## Keys specification

 0-9	To dial the number. Press and hold keys 2-9 for speed dial of preset numbers.
* key	In idle mode, press * key, cyclically shows “*”, “+” In input mode, enter punctuation.
# key	In idle mode, long press # activate or deactivate user profiles. When dial a number, press to enter “#”.
Left soft key	Perform the functions indicated on the left bottom line of the display.
Right soft key	Perform the functions indicated on the right bottom line of the display. Press right soft key to return to upper menu. In idle mode, press right soft key to access Phonebook menu.
Central Key	Menu / OK.

## Inserting SIM cards and memory card

Open the back cover. Remove the battery.

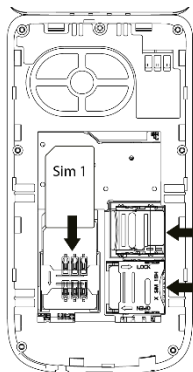

Insert SIM cards in proper device slots.

Insert also micro-SD card, if required.

Insert battery, controlling that battery contacts fit phone contacts.













*Be careful, broken card or batteries cards lead to device breakage and cancelling warranty.*

Close back cover.

Power on the phone long pressing Cancel button.

It is recommended to arrange full battery charge before first use.

## Conditional screen marks on phone

	Connection signal
	Battery charge indicator
	New message
	Missed call
	Silent profile activated
	Outdoor profile activated
	Meeting profile activated
	Alarm clock is active
	Bluetooth switched on
	GPRS Internet is active

## Power on/off the device

To power on the device press and hold the Cancel button until activation of device display.

To power off press and hold the Cancel button until shutdown.

The device is locked automatically (if automatic locking is enabled) either by pressing the Cancel key (if set in Settings) or by alternately pressing LSK and the "\*" key.

Unlock - alternately press LSK and the \* key if the keypad is locked when the phone is open

## Calling

To call - dial number on digital keyboard in local or international format, or choose number from phone contacts list, and press Call button. Choose from which SIM-card to call. To cancel call – press 'cancel' button.

During call it is also possible to: switch volume in a speakerphone mode, start conversation record, add more persons to conference conversation, turn off\switch on microphone and etc.

You can answer a call by opening the phone (if set in the settings) or by pressing the Answer call key after opening the phone.

## Main menu

To access the device's menu, press the left soft key or the center navigation key.

The menu has the following sections:

**Audio player:** Launched Audio player on a separate menu

**Multimedia:** In this menu, media features of the device are gathered: camera, gallery, DV camera, video player, voice recorder.

**FM radio:** Launched FM radio on a separate menu

**Call history:** register incoming, outgoing and missed calls;

**Messaging:** for sending SMS messages and reading incoming messages;

**Contacts:** phone book of telephone contacts and SIM-cards;

**My Files.** To view the files stored on the memory card

**Organizer:** alarm clock, calendar, calculator, torch, Bluetooth, Ebook, SIM menu



**Settings:** phone settings, call settings, display settings, security settings, profiles, connections

## **Audioplayer**

The audio player is designed to listen to music files

To play / pause, press the Center key. To go to the next / previous file - Right / Left. To automatically create a playlist, copy the music files to the memory card in the My music folder. To change the settings, scroll to Options — Settings. To edit playlists, scroll to Options — Playlist. Use the Up / Down keys to adjust the volume.

## **Multimedia**

*Caution: It is desirable to use the following functions in the menu "Multimedia" under the condition of the installed memory card.*

This section contains applications for working with photos, videos and sound.

*Camera – to take photo*

*Image viewer - to view images.*

*DV – for video recording*

*Video player - to view video clips.*

*Voice recorder - for recording sound.*

## **FM radio**

**NB!** *In this model, FM radio operates with a built-in antenna. To improve the reception quality, you may need to connect a wired headset as an antenna. The sound of the FM radio and audio player is transferred to the external speaker and wired headset.*

To turn on / off, press the center key. To search for radio stations, press Right / Left. Use the Up / Down keys to adjust the volume. The Options menu has the ability to

automatically and manually search channels, view saved stations, record files in a file and enable / disable background playback.

## **Call history**

Call history menu contains incoming, outgoing and missed calls register, counter GPRS traffic and allows: dial contact number, send SMS-messages, add new number to contacts, add number to black list, delete information about call and etc.

## **Messaging**

This menu contains everything you need to send, store, view and delete SMS messages.

*Write message:* Select to write and send (or save) a new message.

*Inbox:* Folder with received messages.

*Outbox:* Folders with sent messages.

*Drafts:* incomplete messages.

*Sentbox:* Messages that have been sent.

To Configure Messaging, go to the menu Options—SMS Settings. The Settings menu allows you to set the SMS center numbers for both SIM cards, set the validity period of the message, configure receipt of the delivery status report, adjust the settings for saving messages, switch off or enable push messages.

## **Phonebook**

The Phonebook menu is your phone book, which contains contacts stored in the phone and on SIM cards. The phone memory is designed to store 500 contacts.

Contacts are in alphabetical order. The search bar allows you to find contacts. To switch the method / language of the search press the # key

New contact: press Options--New. Before creating, you have to choose a place to save the contact, enter the Name and phone number, add a photo and melody if necessary, press "Save".

You can add the following data for one contact when saving to Phone: Name, Phone, Icon, Ringtone, Group.

To view the contact, select the cursor and press the center navigation key.

For a call, press the call button.

Additional options open with the left soft key.

Write message: Create and send a text message to the contact.

Edit: edit the contact

Delete: delete the selected contact.

Copy: Copy contact between phone and SIM card.

It also has the ability to: View memory status and delete all contacts, make backups - export - or restore contacts - import - (only if there is a memory card)

*When backing up contacts in the root of the memory card, a system file named vcard\*\*\*\*.vcf is created. When restoring contacts, information is taken from the same file.*

## **My Files**

File manager allows to work with files in phone memory and in memory card. Following operations are available: copying, moving, deleting, creating files, or setting melodies as phone ringtones

## **Organizer**

The following programs are available in this menu:

*Alarm clock* - allows you to set up several alarms.

*Calendar* - to view the calendar. It is possible to create / edit / view events

*Torch*

*Calculator* - for arithmetic calculations.

*Bluetooth* - setup, device review, device connection

*Ebook*

*SIM menu*

## **Settings**

*Phone settings*: contains date and time settings, language settings, shortcut key settings, scheduling on / off settings. Also, this menu allows you to reset to factory settings (*WARNING. Reset code 1122*)

*Display*: Wallpaper settings, display contrast, screen backlighting and keystrokes

*Security*: Provides the ability to set up SIM card lock, lock the phone, auto-lock, and lock certain phone functions. This menu also contains the Blacklist and Whitelist menus.

*Call settings*. The menu allows you to configure the number of active SIM cards, divert options, call barring, auto-dialing, auto-dialing, and more.

*Profiles*: The menu is intended to adjust the sound profiles, ie volume settings, ringtones, vibrate mode, key sound and system for different phone usage conditions such as: outdoor, indoors, silence, and more. It is possible to edit the built-in settings. To do this, press Options and Settings. To activate the set of settings, you must select a profile in the menu and press the center button.

*Connections*: allows you to set up GPRS, specify a default data transfer SIM card, set up an account for data transmission, choose a way to select a network-manual or automatic.

## **Troubleshooting**

Following recommendations may help to solve some problems with phone independently. In case problems occurs try to solve it yourself with following recommendations. If problem is not solved, contact to Sigma mobile service center.

Check whether battery is charged and whether problem continues after device reset.

Try to restore factory settings through menu «Settings - phone – Default settings» (password by default – 1122)

Problems with memory card mostly occurs in case of memory card breakage. Thus, firstly check given card separately. Also recommended to: take off and insert memory card in port, check whether card is put in port correctly, reload phone.

Phone does not power on: check battery charge, repeatedly connect charging device, and wait at least 10 minutes. Press and keep the button «Power on» not less than 5 second. If device does not power on contact in service center.

Battery discharges rapidly: reasons for increased battery charges may be: low air temperature, active using of media programs, huge distance to cellular tower of connection operator.

Battery does not charge: check charging adapter connection to plug. Use only complete charging adapter and cable.

Impossible to call: this problem may be caused by low connection signal, network overloading, incorrect input of contact number, activated function of calling prohibition. Try to change location, check level of connection signal, wipe phone to factory reset. Contact in service center.

Low receiver volume: during conversation, press button «up» to increase volume. Set volume during conversation in profiles. Check signal of cellular connection.

## Passwords

Requests to input following passwords may occur during activating and phone use :

Phone password: request occurs during activating. This is the password of general locking.

Password to reset to factory settings - 1122

PIN-code: if Pin-code checking is active, it is required to input code which is given with SIM-card.

PUK code, PIN2 code - also given with SIM card.

Be careful installing blocking passwords: if they are lost, to renew phone functionality is possible only in service center.